
WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.

Each customer mustprovide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty
with assembly? Missing parts?
Please contact us: info@firstopintl.com
telephone No.:5627813327
send email with your order No. to
For return, please check the return policy with
the retailer or market place you bought from.
Appreciate your purchasing from us.
Pop up your life by our furniture!

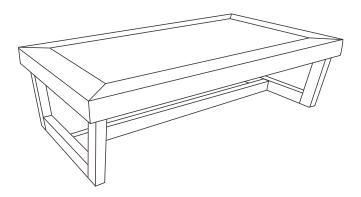



ITEM NO.: FOP-ODF518882101 FOP-ODF518882102

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- Keep furniture away from heat and fire.
- Keep furniture away from sharp objects.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not jump or strike on thefurniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.

PARTS LIST

Ax1



Table top

Bx 2



Leg frame

C_X1




Stretcher



Weight Limitation

400LBS

HARDWARE and TOOL

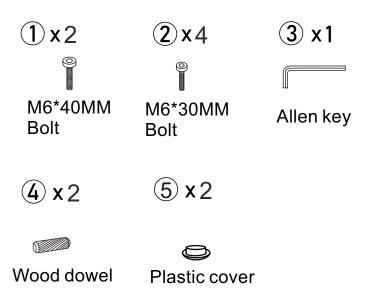



Be sure to check all packing materia fit the packing list. Carefully for small parts, which may have come loose inside the carton during shipment.

ASSEMBLYINSTRUCTIONS




STEP 1: Insert wood dowel(4) into holes at both ends of stretcher (C).

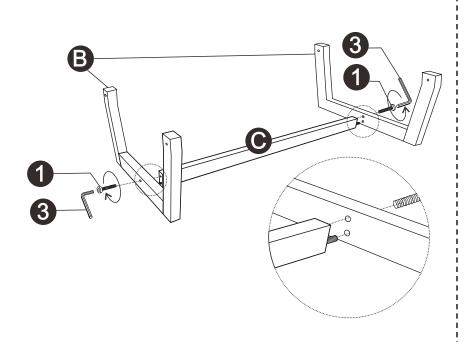

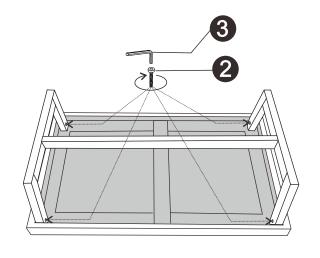

STEP 2: Connect both leg frames(B) with stretcher(C), lock with bolt (1) and allen key(3).

STEP 3: Place table top(A) upside down on clean and flat floor, then place leg frame(step 2) into the below box. Lock with bolt(2) and allen key (3).

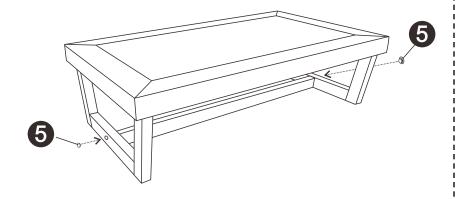

STEP 4: Cover the screw holes with plastic covers(5), assembly completed.